

Installation & Operation Instructions


To avoid the risk of accidents or damage to this product, it is **essential** to read these instructions **thoroughly** before this product is installed and used.

EN Edition
Dec 2013

Installation

Remote Control Bracket Installation

1. Take off mounting plate from the back of bracket. Secure mounting plate on selected location with the two (2) self-tapping screws that come with the product.
2. Fit bracket to mounting plate as shown in below.

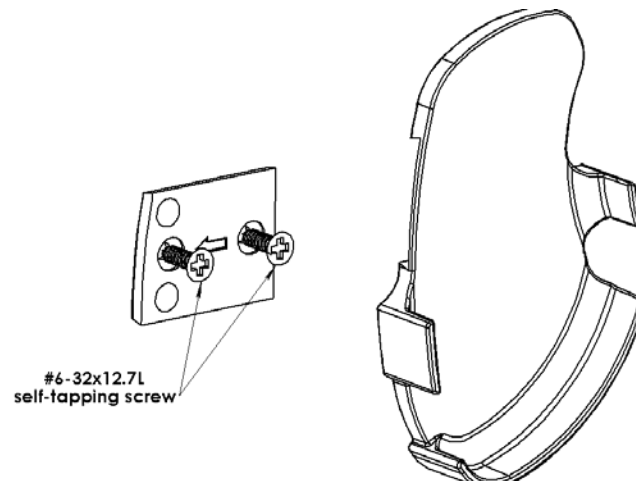


! Provide water and weather protection for the location where joystick control panel is installed.

Operation

Remote Control

1. Press arrow key to control rotation of the spot light.
2. Change light feature by spot/flood switch (see picture below). **Not available for 10550R24.**

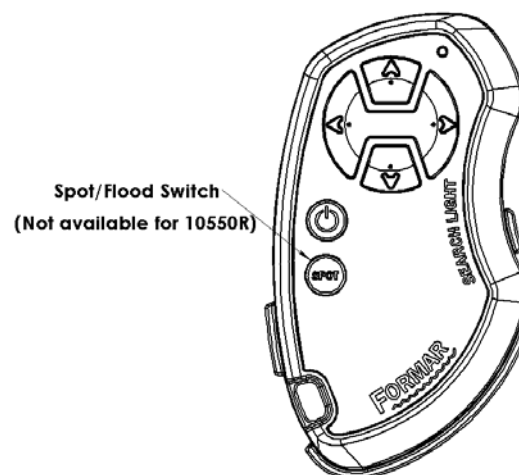


Maintenance

How to conduct general care ...

1. Use diluted neutral cleanser for general cleaning.
- ! Do not use other chemicals or abrasives.
2. No need to provide additional lubrication.


How to replace battery for remote control ...

1. Remove remote control from bracket.
2. Loosen the two (2) screws from back cover of remote control.
3. Carefully disassemble remote control, see details in picture below.
4. Replace the used 12V / A23 battery with new one.
5. Push any button to check if the LED indicator illuminate.

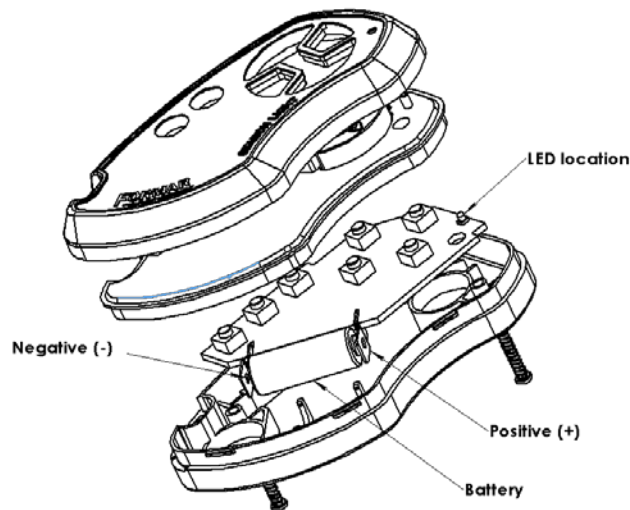


How to locate serial number ...

In case of remote control missing, user can remove the four (4) screws and take off glass front cover to obtain serial number shown on the label placed inside housing, see picture below. Note the last digit of the serial number P2XXXXXXX (X=0~9) then notify dealer.

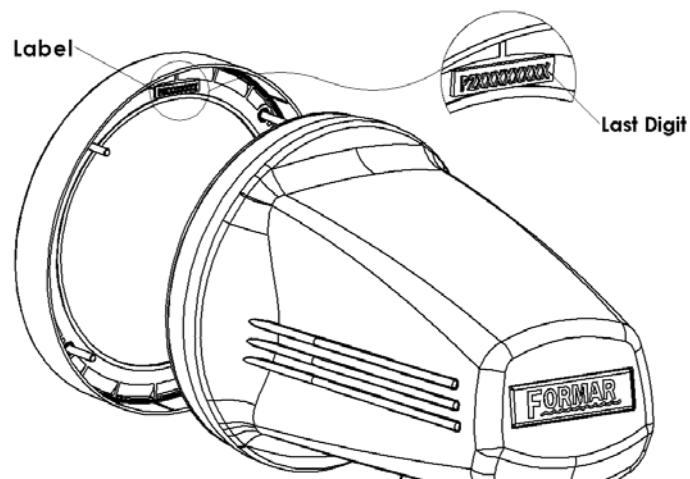

In case of remote control broken or when ordering additional remote control, user can loose the two (2) screws from back cover of the remote control to obtain serial number shown on label R2XXXXXXX (X=0~9). Note the last digit of serial number then notify dealer.

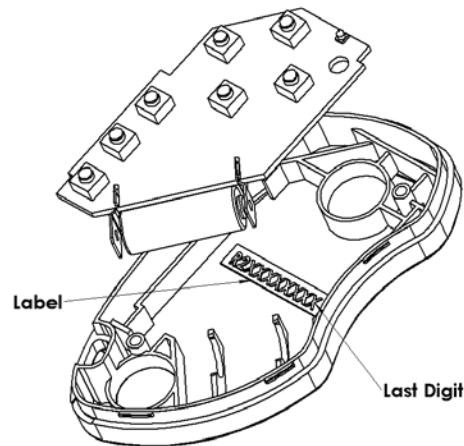

Troubleshooting

Installation work and repairs to electrical components of this product must only be carried out by a suitably qualified and competent person in accordance with current local and national safety regulations. Repairs and other work by unqualified persons could be dangerous. The manufacturer cannot be held liable for unauthorized work.

Limited Warranty

For one (1) year from the date of original purchase, Formar will, at its discretion, repair or replace for the original consumer, free of charge, any parts found defective in material or workmanship. All transportation charges under this warranty must be borne by the consumer.

Proof of purchase is required: A computerized register receipt is required. Hand-written receipts are not accepted for warranty proof of purchase. In the absence of a receipt, warranty period will be calculated from date of manufacture printed or stamped on the product.

There is no other expressed warranty. Implied warranties, including those of merchantability and fitness for a particular purpose, are limited to one (1) year from the date of purchase. This is the exclusive remedy and consequential damages are excluded where permitted by law.

This warranty does not apply if the product has been damaged by accident or misuse, or as a result of service or modification performed by an unauthorized factory. Except as otherwise expressly stated in the previous paragraph, the company makes no representation or warranty of any kind, express or implied, as to merchantability, fitness for a particular purpose, or any other matter with respect to this product. The company shall not be liable for any consequential loss to life safety and property if it's due to user's failure in following this manual to install and use the product.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



The FORMAR brand of products is manufactured by:

Khan's Enterprise Co. Ltd.

1921 Chun Ri Road, Taoyuan

Taiwan

TEL +886-3-358-8181

FAX +886-3-357-8181

Email sales1@khans.com.tw

Distributor

